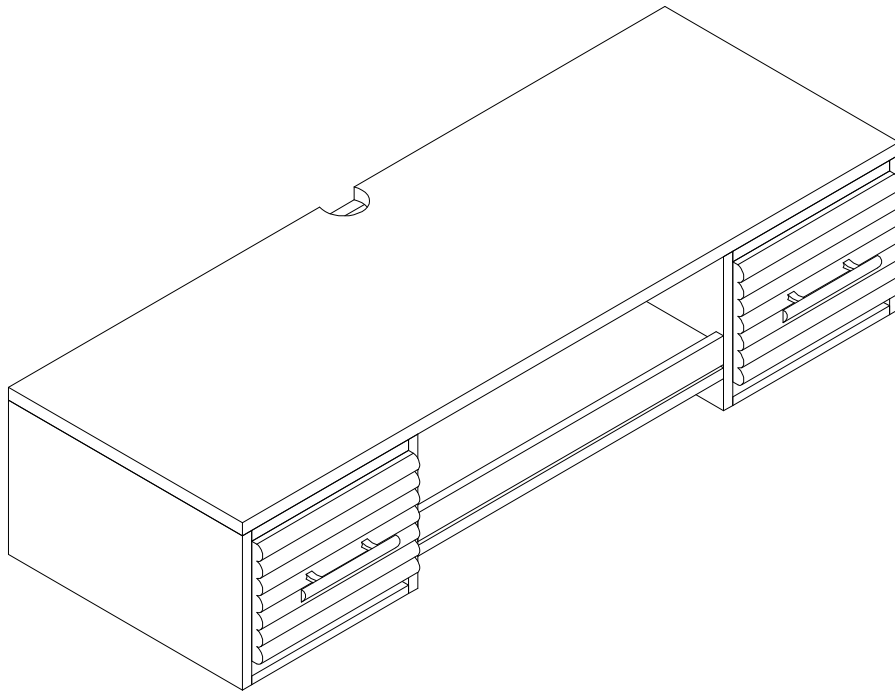


HO610200TX Wall Mount Desk Assembly Instruction



Southern
ENTERPRISES

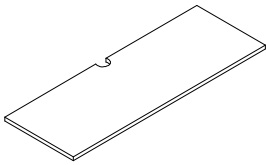
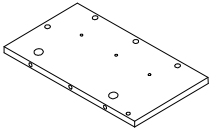
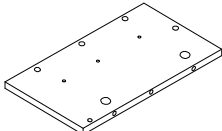
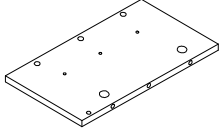
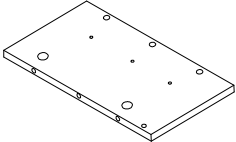
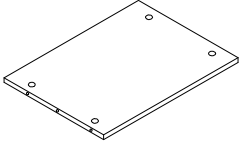
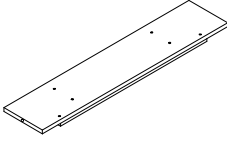
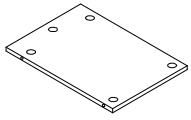
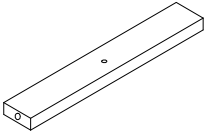
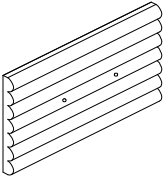
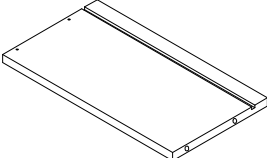
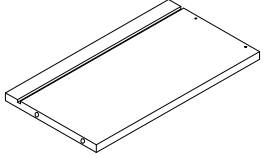
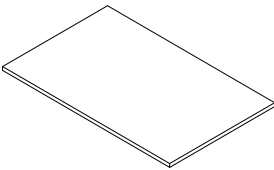
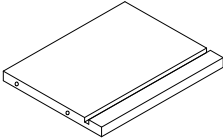
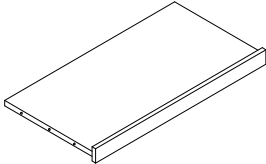
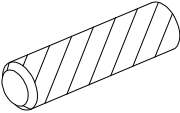
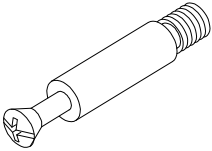
For assistance with assembly contact:
Southern Enterprises Inc.
Customer Service 1-800-633-5096
service@seidal.com
www.seidal.com

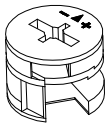
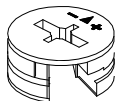
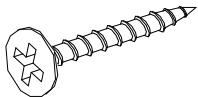
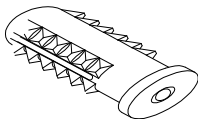
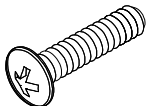
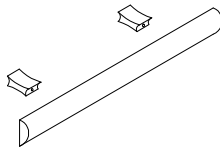
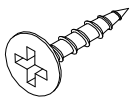
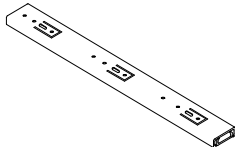
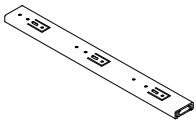
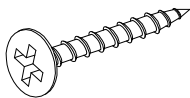
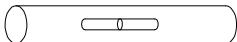
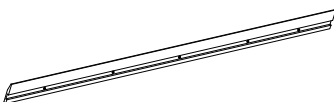

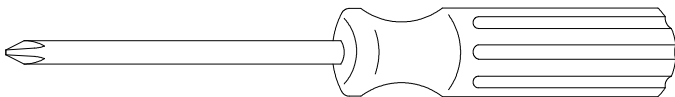


Wall Mount Desk

Parts List

Please check packaging for all parts and hardware before discarding. Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated. Call customer service if hardware is missing. Before beginning assembly, carefully study the diagrams below and sort your hardware according to the pictures. Using the incorrect hardware will cause damage

A.  Top Panel I	B.  Side Panel(Left)	C.  Side Panel(Right)	D.  Left Vertical Panel
E.  Right Vertical Panel	F.  Bottom Panel	G.  Back Panel	H.  Bottom Panel
I.  Rail	J.  Drawer Front Panel	K.  Drawer Side Panel(Left)	L.  Drawer Side Panel(Right)
M.  Drawer Bottom Panel	N.  Drawer Back Panel	O.  Keyboard	
1.  Wood Dowel 8*30mm		2.  Cam Bolt	

3.  <p>Cam Lock</p>	<p>Quantity of 28</p>	4.  <p>Cam Lock</p>	<p>Quantity of 8</p>
5.  <p>Screw 1/8"*1"L</p>	<p>Quantity of 10</p>	6.  <p>Plastic anchor</p>	<p>Quantity of 6</p>
7.  <p>Bolt</p>	<p>Quantity of 4</p>	8.  <p>Handle</p>	<p>Quantity of 2</p>
9.  <p>Screw 1/8" *1/2L</p>	<p>Quantity of 36</p>	10.  <p>Ball Bearing Slide</p>	<p>Quantity of 4</p>
11.  <p>Ball Bearing Slide</p>	<p>Quantity of 2</p>	12.  <p>Screw 1/8"*1-1/2L</p>	<p>Quantity of 6</p>
13.  <p>Level</p>	<p>Quantity of 1</p>	14.  <p>Slide</p>	<p>Quantity of 1</p>
15.  <p>cover</p>	<p>Quantity of 8</p>		
<p>Care and Cleaning Instructions: Before using, wipe with a clean, dry cloth. Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.</p>		<p>all customer service at 1-800-633-5096 for assistance, questions, or Parts.</p>	
<p>Assembly Tool Required No.2 Phillips Screwdriver (Not Included)</p>			

Wall Mount Desk

Assembly Instructions

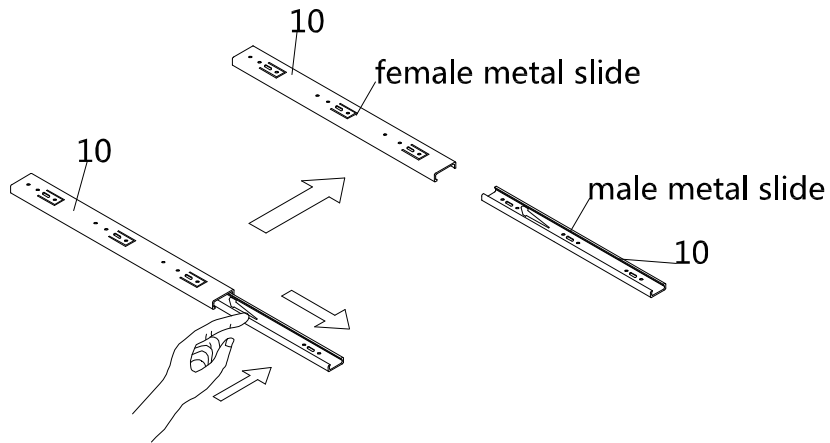


Figure 1

Firstly please disassemble Metal Slides(10) into Male Metal Slide(10) and Female Metal slide(10) as shown .

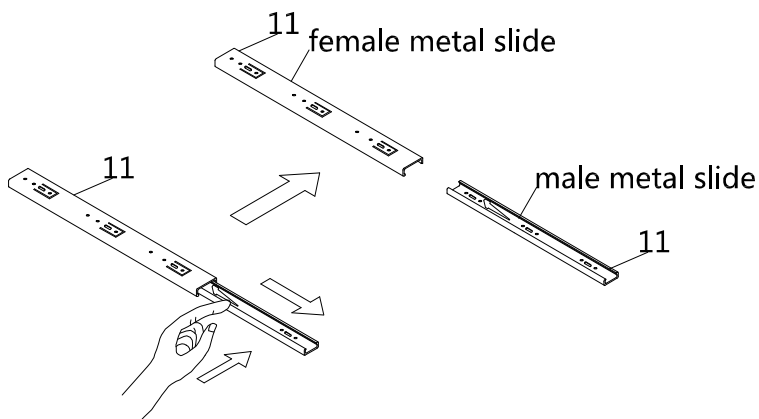


Figure 2

Firstly please disassemble Metal Slides(11) into Male Metal Slide(11) and Female Metal Slide(11) as shown

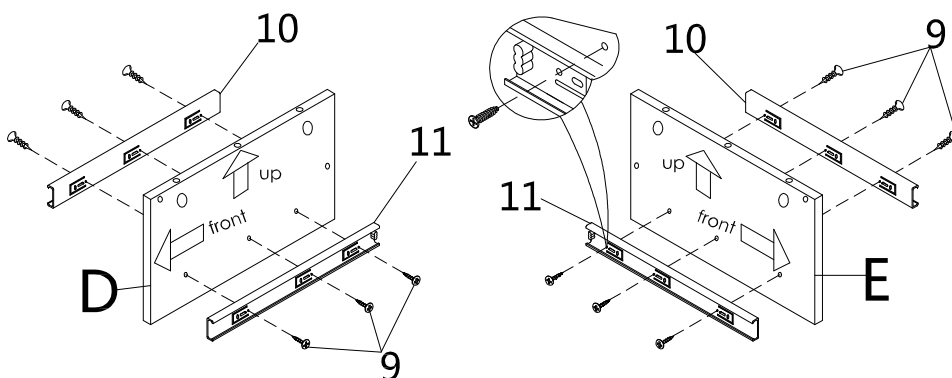
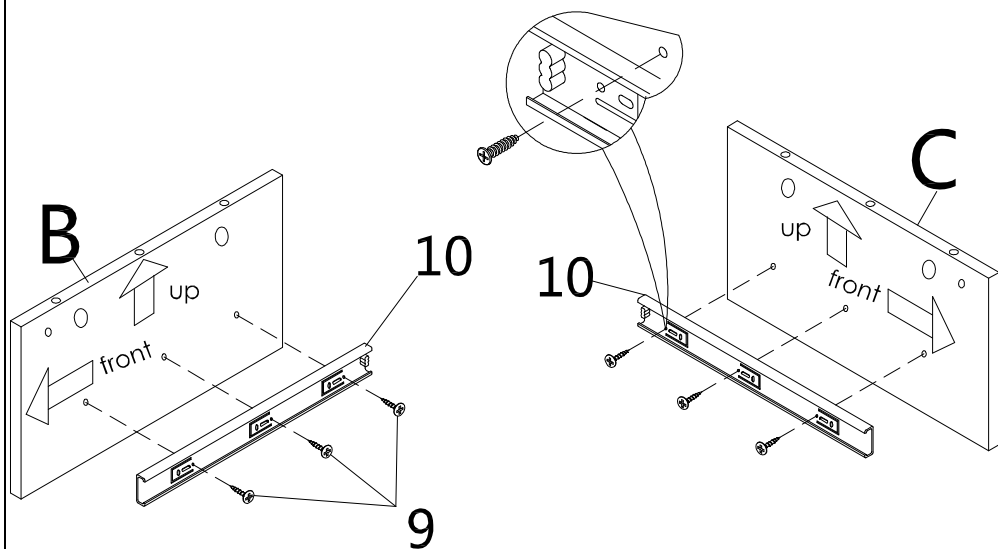


Figure 3

Attach Female Ball Bearing Slides (10/11) to Left Vertical Panel (D) and Right Vertical Panel (E) with Wood Screw (9).

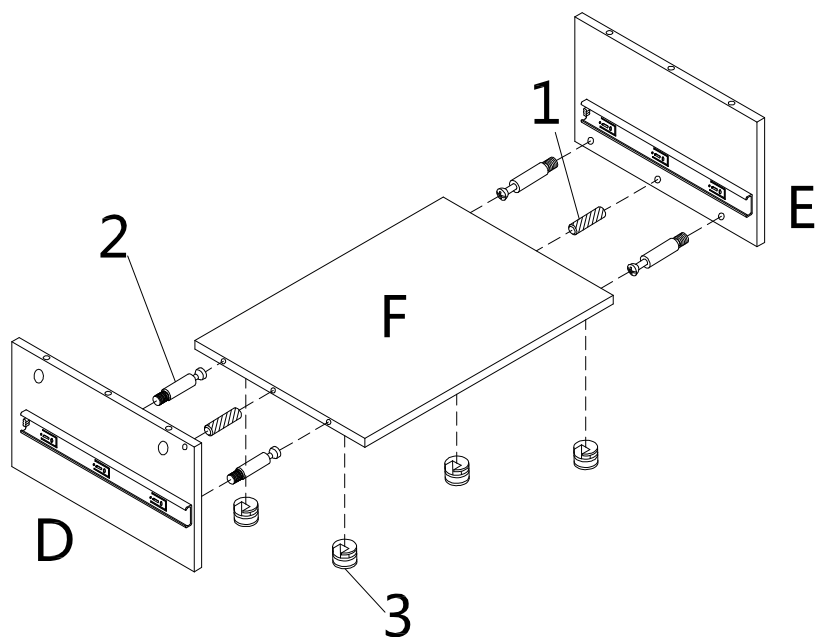
Tighten screws with a phillips screwdriver (not included)



Attach Female Ball Bearing Slides (10) to Left Side Panel (B) and Right Side Panel (C) with Wood Screw (9).

Tighten screws with a Phillips screwdriver (not included)

Figure 4



Insert Cam Lock (3) into predrilled holes on Middle Bottom Panel (F).

Screw Cam Bolt (2) into pre-drilled holes on Vertical Panel (D/E).

Attach Vertical Panel (D/E) to Middle Bottom Panel (F) by inserting Wood Dowel (1) & Cam Bolt (2) into corresponding pre-drilled holes until panels meet.

Secure by rotating Cam Lock (3) clockwise with a Philips screwdriver.

Figure 5

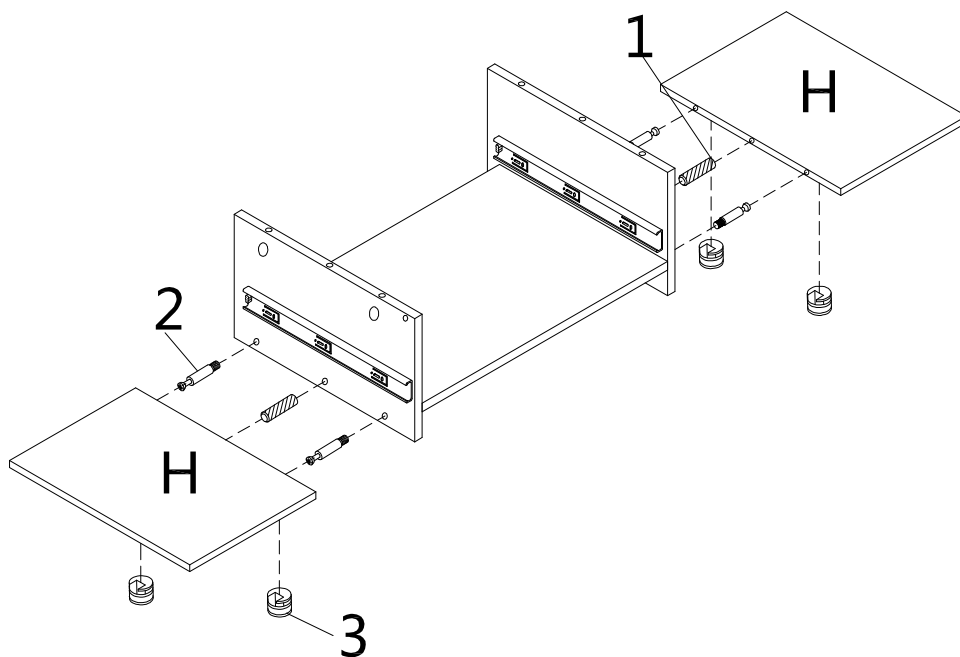


Figure 6

Insert Cam Lock (3) into predrilled holes on Side Bottom Panel (H).

Screw Cam Bolt (2) into pre-drilled holes on pre-assembled unit from figure 5.

Attach Side Bottom Panel (H) to pre-assembled unit from figure 5 by inserting Wood Dowel (1) & Cam Bolt (2) into corresponding pre-drilled holes until panels meet.

Secure by rotating Cam Lock (3) clockwise with a Philips screwdriver.

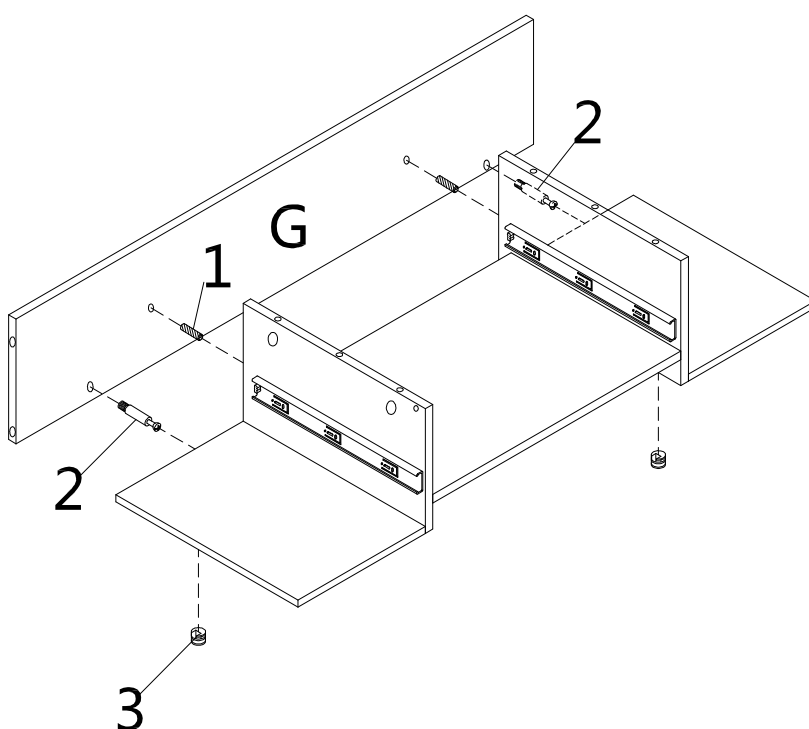


Figure 7

Insert Cam Lock (3) into predrilled holes on pre-assembled unit from figure 6.

Screw Cam Bolt (2) into pre-drilled holes on Back Panel (G). Attach pre-assembled unit from figure 6 to Back Panel(G) by inserting Wood Dowel (1) & Cam Bolt (2) into corresponding pre-drilled holes until panels meet.

Secure by rotating Cam Lock (3) clockwise with a Philips screwdriver.

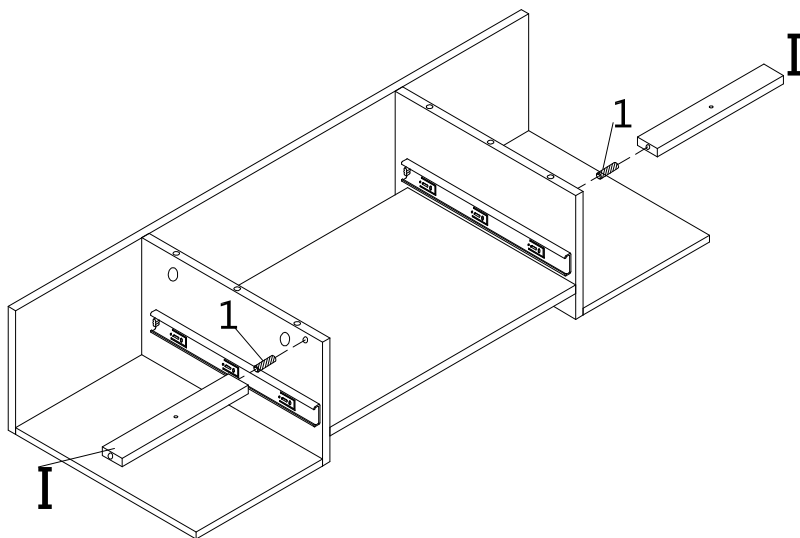


Figure 8

Attach Rail(I) to pre-assembled unit from figure 7 with Wood Dowel(1).

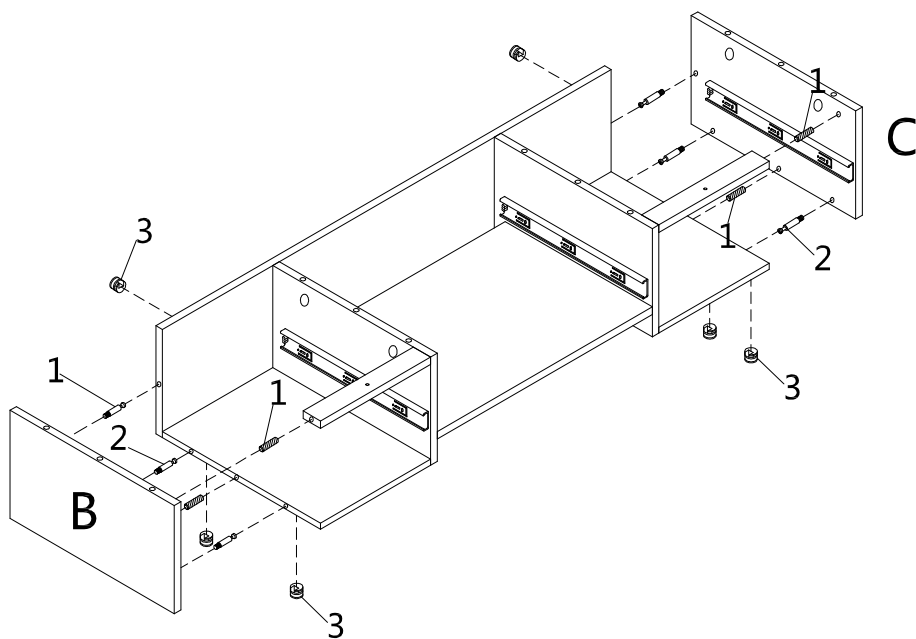


Figure 9

Insert Cam Lock (3) into pre-drilled holes on pre-assembled unit from figure 8.

Screw Cam Bolt (2) into pre-drilled holes on Side Panel (B/C).

Attach Side Panel (B/C) to pre-assembled unit from figure 8 by inserting Wood Dowel (1) & Cam Bolt (2) into corresponding pre-drilled holes until panels meet.

Secure by rotating Cam Lock (3) clockwise with a Philips screwdriver.

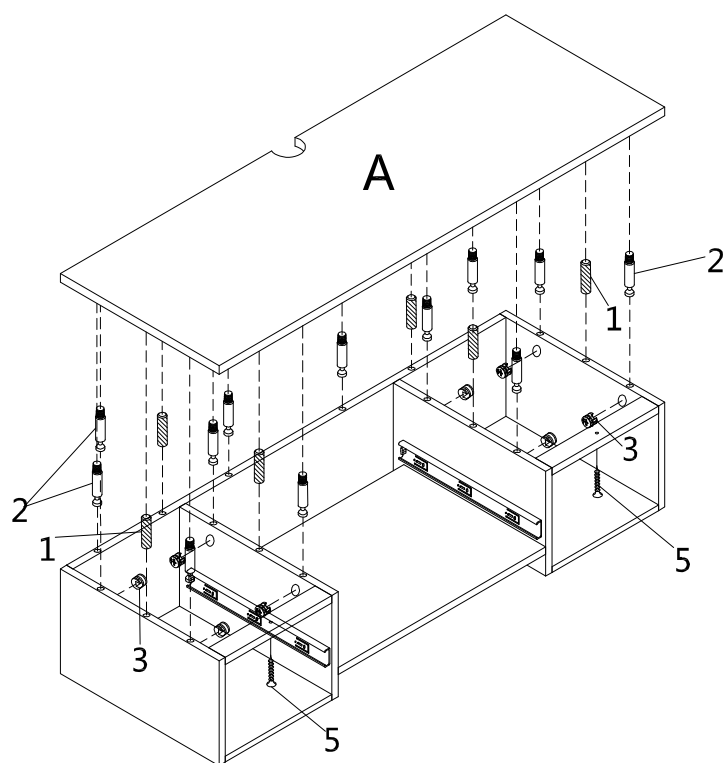


Figure 10

Insert Cam Lock (3) into predrilled holes on pre-assembled unit from figure 9.

Screw Cam Bolt (2) into pre-drilled holes on Top Panel (A). Attach Top Panel (A) to pre-assembled unit from figure 9 by inserting Wood Dowel (1) & Cam Bolt (2) into corresponding pre-drilled holes until panels meet.

Secure by rotating Cam Lock (3) clockwise with a Philips screwdriver.

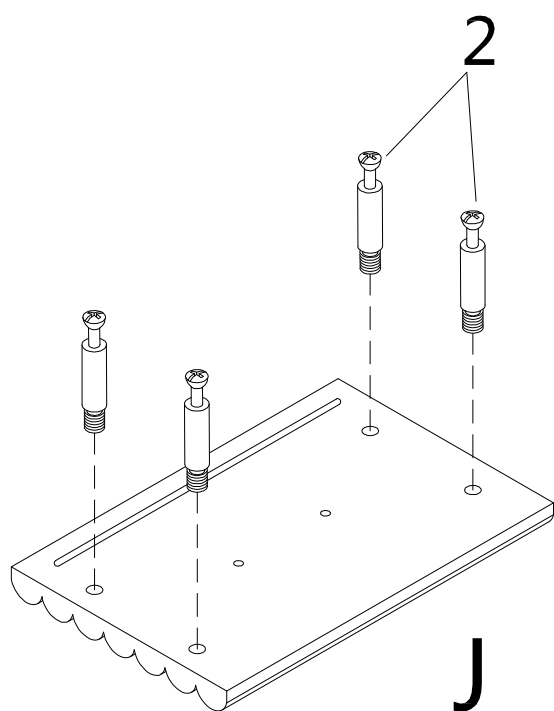


Figure 11

Screw Cam Bolt (2) into pre-drilled holes on Drawer Front Panel (J).

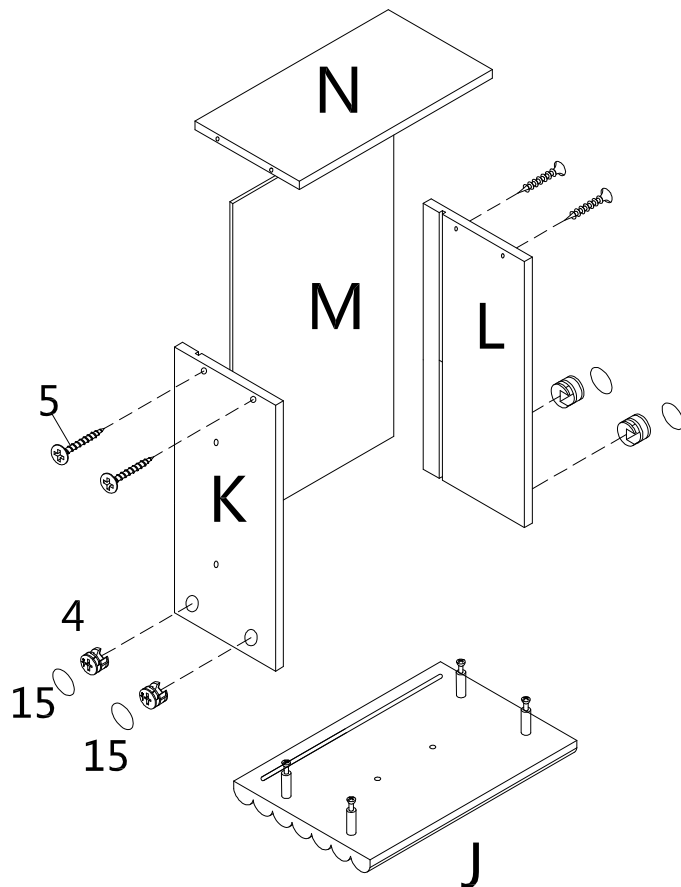


Figure 12

Insert Cam Lock (4) into
predrilled holes on Drawer Side
Panel (K/L)

Attach Drawer Side Panel (K/L)
to Drawer Front Panel(J) by
inserting Cam Bolt (2) into
corresponding pre-drilled holes
until panels meet.

Secure by rotating Cam Lock (4) clockwise with a Philips screwdriver.

Insert the Drawer Bottom Panel (R) into the corresponding groove of Drawer front Panel (J) & drawer side panel (K/L).

Attach the Drawer Back Panel (N) to Drawer Side panel matching the groove and tighten them by using Screw (5).

Tighten screw with Phillips
screwdriver(not included)

Cover the cam lock hole with
cover(15).

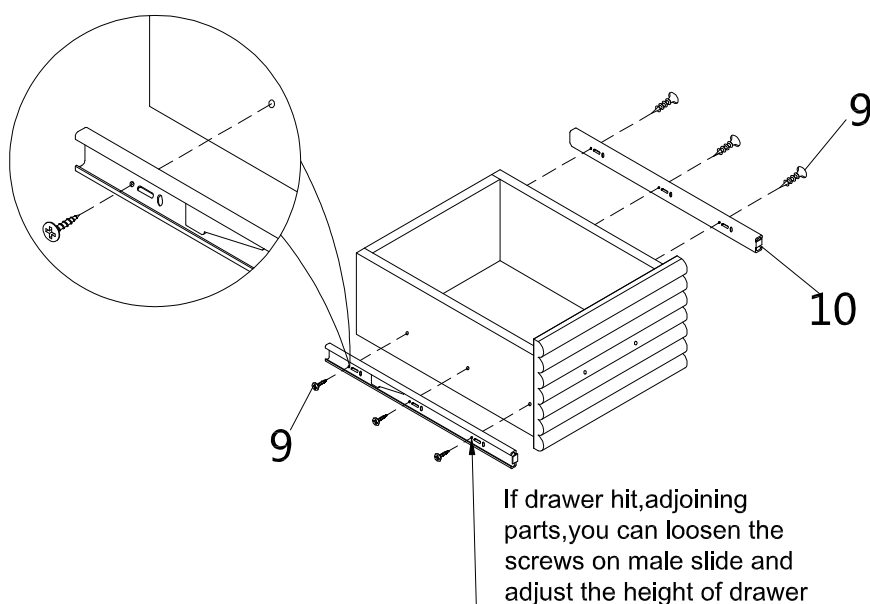
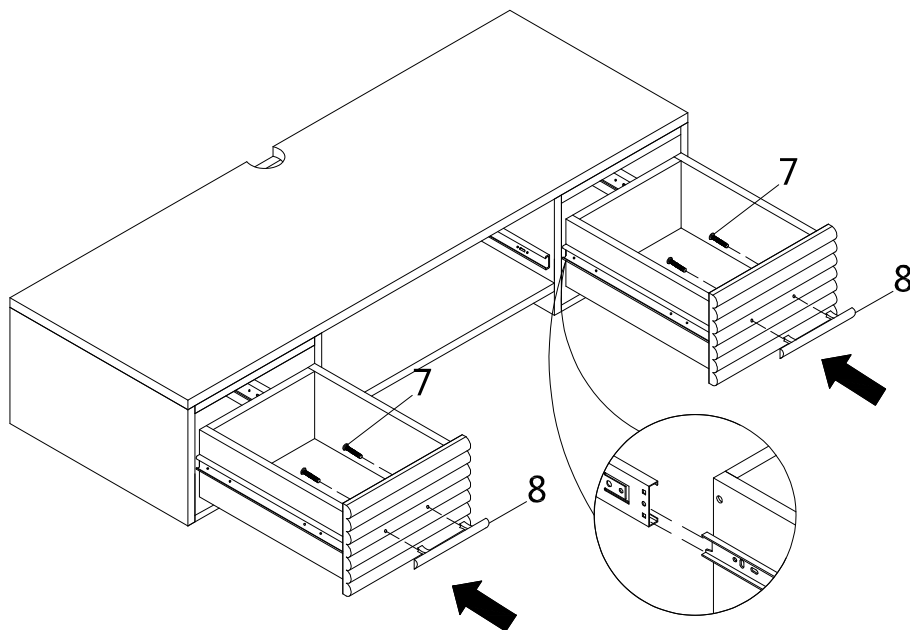


Figure 13

Attach Male Ball Bearing Slide
(10) to Drawer with Screw (9)

Tighten screw with Phillips
screwdriver(not included)

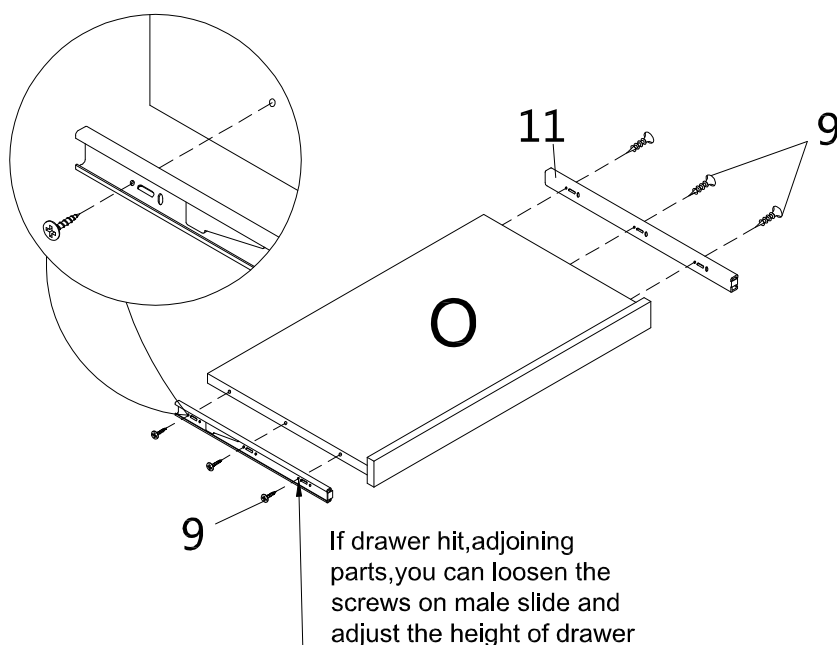


Attached Handle(8) to drawer front with Bolt (7)

Tighten bolt with Phillips screwdriver(not included)

Attached drawer box's into figure 10 unit, please make sure drawer box side's male ball bearing slide into side panel's female ball bearing slide, please try and make sure ball bearing slide in and out smoothly.

Figure 14



Attach Male Ball Bearing Slide (11) to Keyboard(O)with Screw (9)

Tighten screw with Phillips screwdriver(not included)

Figure 15

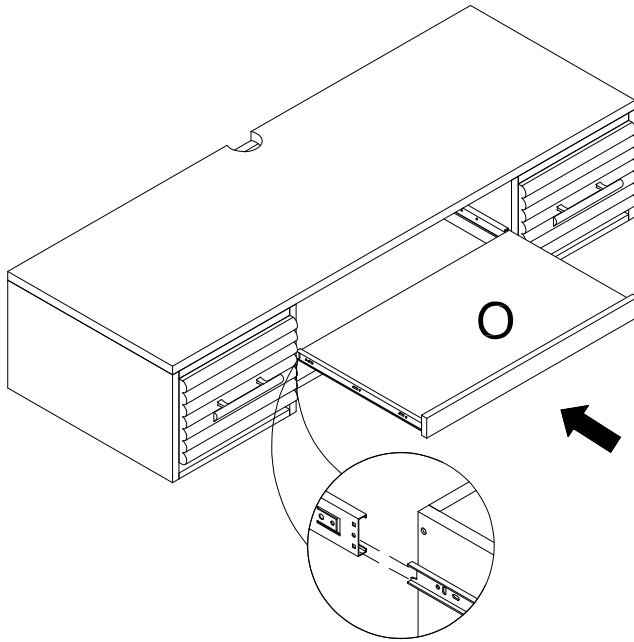


Figure 16

Attached keyboard into figure 14 unit, please make sure drawer box side's male ball bearing slide into side panel's female ball bearing slide, please try and make sure ball bearing slide in and out smoothly.

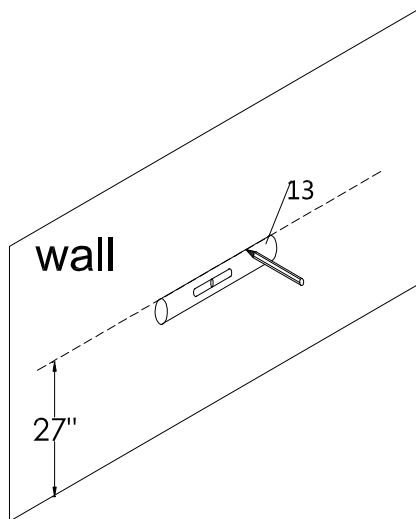


Figure 17

Please mark a line on wall with pencil as shown

Use a level on wall to insure line is level

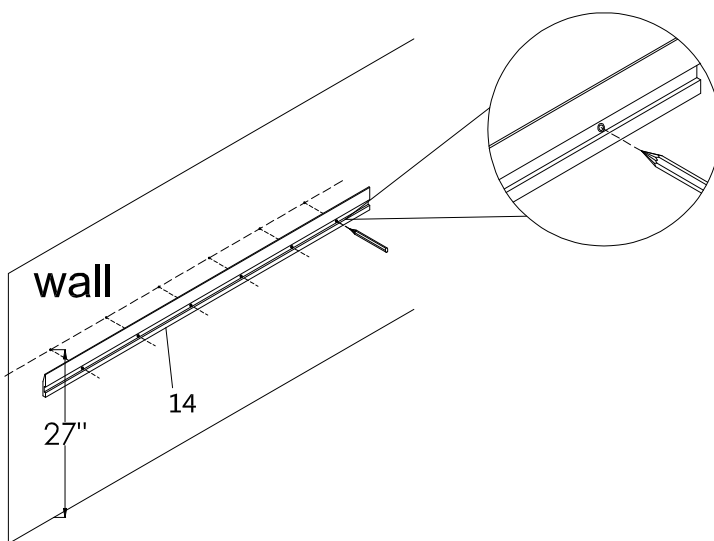


Figure 18

Place slide (14) against the wall at the desired location. then, mark each hole with a pencil.

Remove the slide.

Tip: If mounting to sheet rock (cavity wall) it is advisable to mount at least one screw (without anchor) directly to a wall stud.

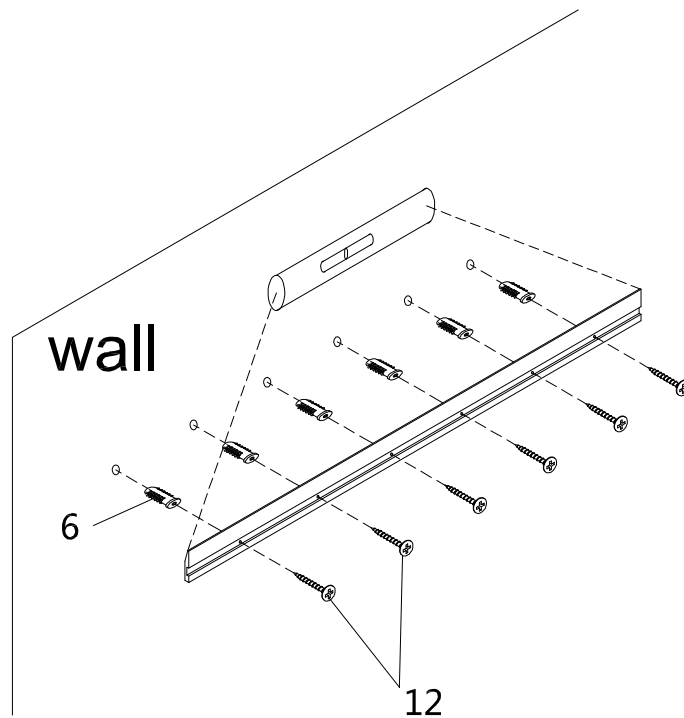


Figure 19

Using a power drill and 3/16" drill bit, drill a hole through the wall at each marked hole location where screw (12) will not hit a stud in the wall. Then insert plastic anchors (6) into each hole and lightly tap anchors (6) with a hammer until they are securely flush with the face of the wall. After the plastic anchors (C) are securely in place, position slide (14) to be mounted to the wall. Using a philips screwdriver, drive in the screws (12) into plastic anchors (C) until the slide (14) is securely placed on the wall. Use a level on wall to insure slide (14) is level

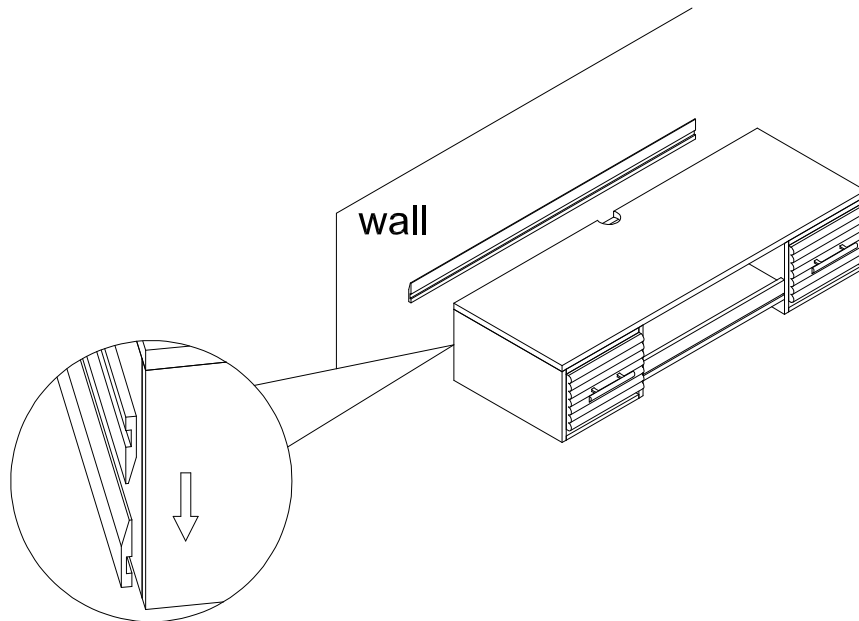


Figure 20

Place the pre-assembled unit from figure 16 to slide as shown

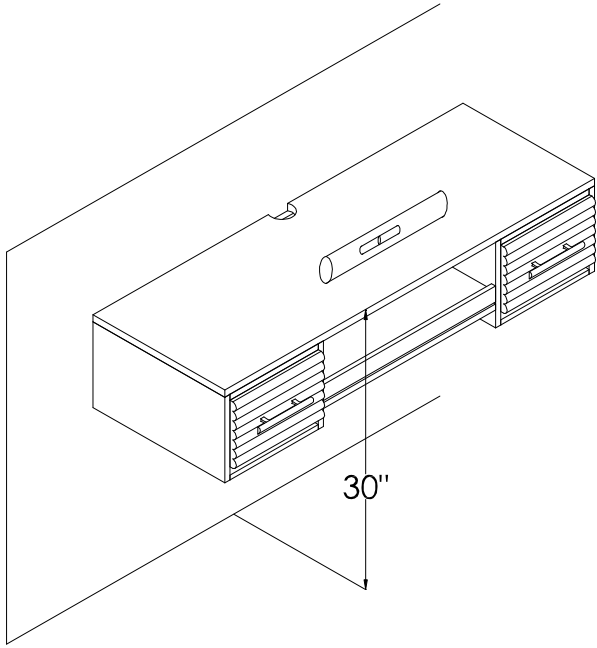


Figure 21

Use a level on table to insure table is level

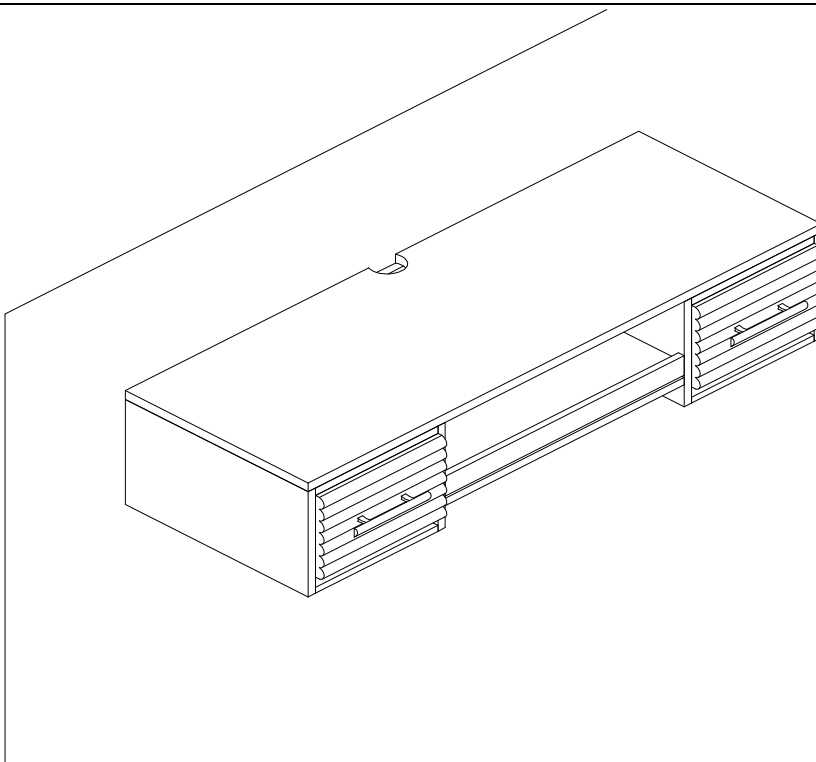


Figure 22

Now you wall mount desk is ready for use

Max loading weight of top :20lbs
 Max loading weight of keyboard :10lbs
 Max loading weight of each drawer :10lbs

Parts Replacement Form

Customer Information

Name _____

Address _____

City/State/Zip Code _____

Phone Number _____

Please indicate where you purchased this item: Store/Website/Catalog

Please indicate color/size/style number:

Style No	Parts Letter	Parts Description	Quantity Needed
----------	--------------	-------------------	-----------------

_____	_____	_____	_____
-------	-------	-------	-------

_____	_____	_____	_____
-------	-------	-------	-------

_____	_____	_____	_____
-------	-------	-------	-------

Please immediately examine this product carefully. Any request for missing parts or damage replacement must be received within 90 days of your receipt of the product. Replacement, if available, will be honored within this time frame. Parts will not be available for items arriving fully assembled. We do not recommend mowe are not responsible for any damages due to product modification(s). If damages or missing parts are not reported within 90 days of your receipt, we are under no obligation to provide parts or replacement merchandise.

Please contact Southern Enterprises at 800-633-5096 or in Dallas 972-869-0111/ 9am – 4pm Mon-Fri Central time if you have product issues or email us at service@seidal.com. Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction.

Please contact the retailer that you purchased from for returns.



Southern
ENTERPRISES